

| Maintenance pricing for 200K mileage intervals | |
|---|------------|
| Non-Turbo | |
| Model | Price |
| Accord 2.4A | \$1,151.97 |
| Accord 2.0A | \$1,026.17 |
| Civic 1.6A/Civic 1.8A | \$911.06 |
| Civic Hybrid 1.5A/Civic Hybrid 1.3A | \$1,103.75 |
| Civic 2.0A | \$893.14 |
| Civic Type R 2.0M | \$814.98 |
| CR-V2.4A | \$891.19 |
| Mobilio 1.5A | \$972.40 |
| Freed 1.5A | \$878.47 |
| Jazz 1.5A/Jazz 1.3A | \$849.61 |
| Jazz 1.5M | \$807.13 |
| Jazz Crosstar 1.5A/Jazz Hybrid 1.5A | \$800.75 |
| Jazz Base & Home 1.5A | \$828.22 |
| City 1.5A | \$895.23 |
| HR-V 1.5A | \$850.16 |
| CR-V 2.0A | \$875.58 |
| Odyssey 2.4A | \$1,035.32 |
| e:HEV | |
| Model | Price |
| Accord 2.0A e:HEV | \$1,110.45 |
| Civic 2.0 e:HEV | \$969.76 |
| HR-V 1.5A e:HEV | \$818.11 |
| Freed 1.5A e:HEV | \$830.40 |
| Turbo | |
| Model | Price |
| Accord Turbo 1.5A | \$1,122.79 |
| Civic Turbo 1.5A/Civic Turbo Hatchback 1.5A | \$705.46 |
| Jade Turbo 1.5A | \$1,071.29 |
| CR-V Turbo 1.5A | \$739.80 |
| Civic Turbo Type R 2.0M | \$1,151.89 |
| *The estimated price is inclusive of GST and is subject to change without prior notice. | |



PACKAGE F

SERVICEMAINTENANCE MILEAGE AT : 200,000KM

| | BASIC SERVICE PACKAGE |
|----|---|
| 1 | Replace Engine Oil |
| 2 | Replace Oil Filter |
| 3 | Replace Transmission Oil |
| 4 | Replace Spark Plugs |
| 5 | Replace Fuel Filter / Strainer |
| 6 | Replace 4x4 Transmission (Diffrential) Oil, if applicable |
| 7 | Replace Brake Fluid |
| 8 | Clean or Replace if Necessary - Air Cleaner Element |
| 9 | Transmission Oil(Manual/Automatic/MMT) |
| 10 | Radiator Coolant Conditions & Level |
| 11 | Radiator Hoses & Connections |
| 12 | Radiator Pressure Cap |
| 13 | Brake Fluid Conditions |
| 14 | Brake Master Pump, Hoses, Lines & Connections |
| 15 | ABS DTC Indicator Light |
| 16 | Clutch Fluids Conditions & Level |
| 17 | Clutch Master Pump, Hoses, Lines & Connections |
| 18 | Slave Cylinder, Pipes & Connections |
| 19 | Battery Conditions & Electrolyte |
| 20 | Battery Casing & Terminal |
| 21 | Front Head Lights |
| 22 | Rear Tail Lights |
| 23 | Rear Brake Lights |
| 24 | Licence Plate Lights |
| 25 | 3rd Brake Lights |
| 26 | Turn Signal Lights |
| 27 | Hazard Flasher |
| 28 | Tires Side Wall Conditions |
| 29 | Tires Irregular Thread Wear |
| 30 | Wiper Washer Reservoir Conditions |
| 31 | Wiper Washer Fluid Level |
| 32 | Windshield Wiper Washer Motor |
| 33 | Windshield Wiper Motor |
| 34 | Windshield Wiper Arms/Blade |
| 35 | Front Door Hinges, Upper & Lower |
| 36 | Rear Door Hinges, Upper & Lower |
| 37 | Tailgate Hinges |
| 38 | Hood Hinges & Latch |
| 39 | Fuel Fill Lid |

| | POWER TRAIN PACKAGE |
|----|--|
| 1 | A/T "DTC" Indicator Light |
| 2 | A/T Gear Position Indicator Panel Light |
| 3 | A/T Hoses & Connections |
| 4 | A/T Shift Lever Position Indicator Panel Light |
| 5 | Driveshaft Boots |
| 6 | Driveshaft Noise |
| 7 | Engine DTC Indicator Panel Light |
| 8 | Engine Oil Low Pressure Panel Indicator Light |
| 9 | Radiator Fan |
| 10 | Catalytic Converter |
| 11 | Exhaust Manifold |
| 12 | Exhaust Silencer |
| 13 | Fuel Lines & Connections |
| 14 | Intake Manifold |
| 15 | Fuel Injector |
| 16 | Fuel Tank |
| 17 | Alternator, P / Steering, Air-con Belts |
| 18 | High Tension Wire |
| 19 | Ignition Timing |
| 20 | Valve Clearance |

| | CONTROL MECHANISM & SYSTEM PACKAGE |
|----|---|
| 1 | Charging Indicator Panel Light |
| 2 | EPS DTC Indicator Light |
| 3 | Front Shock Absorber |
| 4 | Key Immobilizer DTC Indicator Light |
| 5 | Power Steering Connections, Hoses & Pump |
| 6 | Rear Shock Absorber |
| 7 | Side Slip Wheel Test - Front & Rear |
| 8 | SRS Airbag Cut Off Indicator |
| 9 | SRS Airbag Side Indicator |
| 10 | Stablizer Link / Bar & Bushing Holder |
| 11 | Steering Column & Tilt Lever (Movement) |
| 12 | Steering Tie Rod Ends, Steering Gearbox & Boots |
| 13 | Front Brake (Caliper, Disc & Pads) |
| 14 | Front Wheel Bearing (Rattle) |
| 15 | Rear Brakes (Caliper, Disc & Pads) |
| 16 | Rear Wheel Bearing (Rattle) |
| 17 | Brake Pedal Height & Brake Switch |
| 18 | Rear Brake (Drum, Wheel Cylinder, Shoes) |
| 19 | Parking Brake |
| 20 | ABS System Operation |

Applicable to Non-Turbo & e:HEV vehicle

PACKAGE F1

SERVICEMAINTENANCE AT : 21ST SERVICING



| | BASIC SERVICE PACKAGE |
|----|---|
| 1 | Replace Engine Oil |
| 2 | Replace Oil Filter |
| 3 | Replace Transmission Oil |
| 4 | Replace Spark Plugs |
| 5 | Replace Fuel Filter / Strainer |
| 6 | Replace Brake Fluid |
| 7 | Clean or Replace if Necessary - Air Cleaner Element |
| 8 | Transmission Oil(Manual/Automatic/MMT) |
| 9 | Radiator Coolant Conditions & Level |
| 10 | Radiator Hoses & Connections |
| 11 | Radiator Pressure Cap |
| 12 | Brake Fluid Conditions |
| 13 | Brake Master Pump, Hoses, Lines & Connections |
| 14 | ABS DTC Indicator Light |
| 15 | Clutch Fluids Conditions & Level |
| 16 | Clutch Master Pump, Hoses, Lines & Connections |
| 17 | Slave Cylinder, Pipes & Connections |
| 18 | Battery Conditions & Electrolyte |
| 19 | Battery Casing & Terminal |
| 20 | Front Head Lights |
| 21 | Rear Tail Lights |
| 22 | Rear Brake Lights |
| 23 | Licence Plate Lights |
| 24 | 3rd Brake Lights |
| 25 | Turn Signal Lights |
| 26 | Hazard Flasher |
| 27 | Tires Side Wall Conditions |
| 28 | Tires Irregular Thread Wear |
| 29 | Wiper Washer Reservoir Conditions |
| 30 | Wiper Washer Fluid Level |
| 31 | Windshield Wiper Washer Motor |
| 32 | Windshield Wiper Motor |
| 33 | Windshield Wiper Arms/Blade |
| 34 | Front Door Hinges, Upper & Lower |
| 35 | Rear Door Hinges, Upper & Lower |
| 36 | Tailgate Hinges |
| 37 | Hood Hinges & Latch |
| 38 | Fuel Fill Lid |

| | POWER TRAIN PACKAGE |
|----|--|
| 1 | A/T "DTC" Indicator Light |
| 2 | A/T Gear Position Indicator Panel Light |
| 3 | A/T Hoses & Connections |
| 4 | A/T Shift Lever Position Indicator Panel Light |
| 5 | Driveshaft Boots |
| 6 | Driveshaft Noise |
| 7 | Engine DTC Indicator Panel Light |
| 8 | Engine Oil Low Pressure Panel Indicator Light |
| 9 | Radiator Fan |
| 10 | Catalytic Converter |
| 11 | Exhaust Manifold |
| 12 | Exhaust Silencer |
| 13 | Fuel Lines & Connections |
| 14 | Intake Manifold |
| 15 | Fuel Injector |
| 16 | Fuel Tank |
| 17 | Alternator, P / Steering, Air-con Belts |
| 18 | High Tension Wire |
| 19 | Ignition Timing |
| 20 | Valve Clearance |

| | CONTROL MECHANISM & SYSTEM PACKAGE |
|----|---|
| 1 | Charging Indicator Panel Light |
| 2 | EPS DTC Indicator Light |
| 3 | Front Shock Absorber |
| 4 | Key Immobilizer DTC Indicator Light |
| 5 | Power Steering Connections, Hoses & Pump |
| 6 | Rear Shock Absorber |
| 7 | Side Slip Wheel Test - Front & Rear |
| 8 | SRS Airbag Cut Off Indicator |
| 9 | SRS Airbag Side Indicator |
| 10 | Stablizer Link / Bar & Bushing Holder |
| 11 | Steering Column & Tilt Lever (Movement) |
| 12 | Steering Tie Rod Ends, Steering Gearbox & Boots |
| 13 | Front Brake (Caliper, Disc & Pads) |
| 14 | Front Wheel Bearing (Rattle) |
| 15 | Rear Brakes (Caliper, Disc & Pads) |
| 16 | Rear Wheel Bearing (Rattle) |
| 17 | Brake Pedal Height & Brake Switch |
| 18 | Rear Brake (Drum, Wheel Cylinder, Shoes) |
| 19 | Parking Brake |
| 20 | ABS System Operation |

Applicable to Turbo vehicle